

VIDEO INSTALLATION INSTRUCTIONS

Scan the QR code or go to MailKeyHolder.com for WallKeep's expert installation tips video.

Scan Me!



RECOMMENDED TOOLS



Hammer



Level



Pencil



Tape Measure



Drill / Driver

HARDWARE NOTE: Your WallKeep Mail & Key Holder includes two types of hangers for you to choose between: conventional plastic anchors with screws OR “seamless” hooks that cause minimal wall damage if removed. [We include three of each, so you have a spare; only two of them are used to hang your Wall Shelf.]

If you're now wondering which type of hanger to use, please know that while the seamless type are easier to install and are quite strong, for maximum weight holding capacity, you may elect to use the conventional plastic wall anchors and screws.

THE BEGINNING STEPS ARE THE SAME FOR EITHER TYPE OF HANGER




1
TO BEGIN: The most important thing is to position your shelf in the proper location and get it level. Don't just trust your eye! A tape measure will help with position and a carpenter's level will ensure you hang it straight.



2
Hold the shelf up in position and use a level to get it straight. Make two light horizontal pencil marks on the wall along the top edge in the vicinity of the wall cleats.




3
Notice the pair of sawtooth cleats on the back of your shelf. Make a light vertical pencil mark on the wall roughly near the center of each cleat.

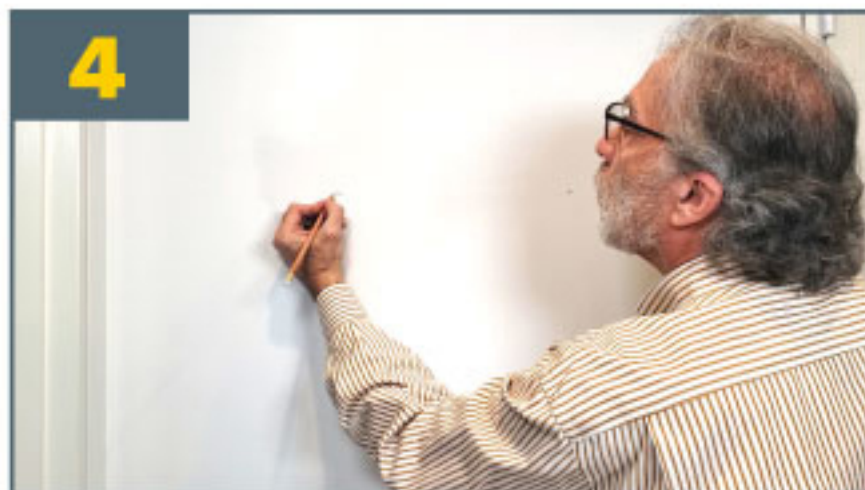

4
Darken the lines where they cross. You can use a clean and slightly damp paper towel or magic eraser to remove any other extraneous pencil lines or marks.

[OPTION A] INSTALLATION WITH SEAMLESS HOOKS

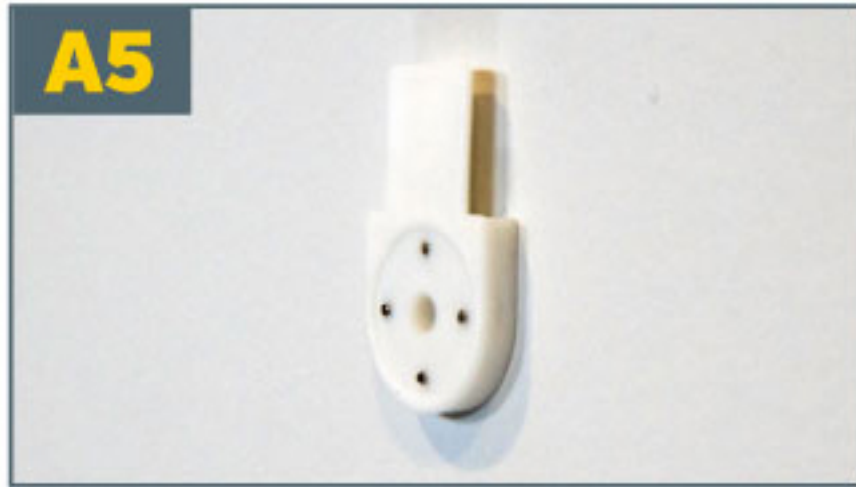

Although we call them “hooks,” this hardware just has a little tab that you mount facing up toward the ceiling. Make sure you’re attaching them with the tab facing up!



The hole in the middle should align with the cross mark you made on the wall. Please confirm the position and level of both marks before moving to the next step.




Lightly hammer the seamless hook [tap... tap... tap...] until the four little pins sit level and flush with the plastic, ensuring they penetrate the drywall.



Place the wall shelf’s sawtooth cleats over the upward-pointing tabs and you’re done!

[OPTION B] INSTALLATION WITH CONVENTIONAL ANCHORS & SCREWS

For this option, you will first create holes for the two plastic anchors. Of course, these holes must be correctly sized. It’s better to be *slightly undersized* rather than too large.

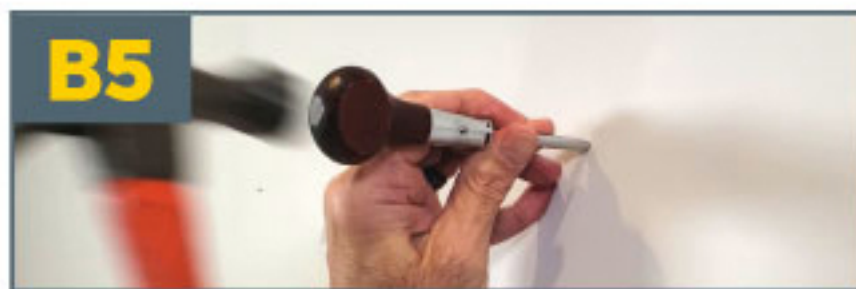


For installing in drywall, we like to make the holes using a carpenter’s awl. It creates less of a mess than drilling. Tap it in gradually and frequently test for anchor fit.



Perfect fit is when you can press the anchor in partially with your thumb. Then lightly hammer it all the way flush with the wall.



Alternately, use a drill driver with a 3/16" [5 mm] twist drill bit. A damp paper towel or sponge held underneath while you’re drilling will help contain the dust and mess!

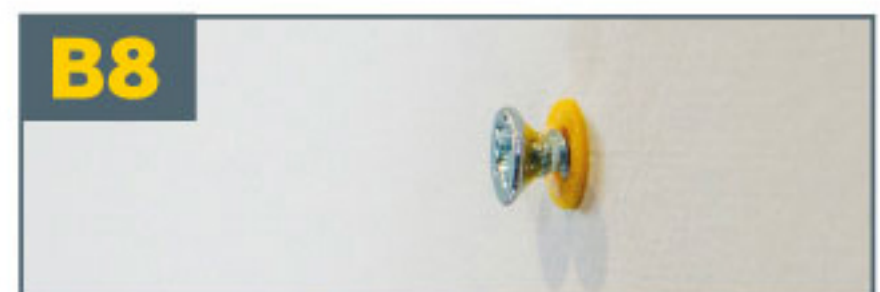

Insert the screws, leaving the screwheads protruding about 1/4" [6mm] from the wall. Place the wall shelf’s sawtooth cleats over the screwheads and you’re done!